

# Patlock Instruction Leaflet



## PUSH, CLICK, SECURE

Thank you for purchasing a Patlock home security French Door lock. Please take time to read all the instructions carefully before fitting.

**The components within the pack are;**

**Patlock x 1**

**Patlock tamper resistant spindles x 2**

**Spring clips x 2**

**Window stickers x 2**


### IMPORTANT

Your Patlock is a simple to use everyday additional lock and will work without fitting the tamper resistant spindles, however we advise fitting them to provide an extra level of security.

In the event of an attempted break in, the tamper resistant spindles will help to maintain the integrity of your internal handles and the Patlock.

### HOW TO OPEN YOUR PATLOCK

Press the release buttons simultaneously on both sleeves and pull apart. The release buttons are located to the front and back of both sleeves.

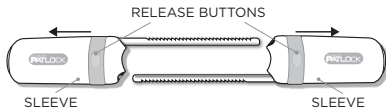


## HOW TO FIT YOUR PATLOCK

With the black and yellow Patlock logo visible from the outside, slide one sleeve over each interior handle.

Press the release buttons simultaneously and push the sleeves together ensuring that the locking bars are fully engaged in the adjacent locking chamber on the opposite sleeve.

The ratchet mechanism will hold your Patlock securely in position. For larger or curved handles remove the rubber insert from each sleeve.

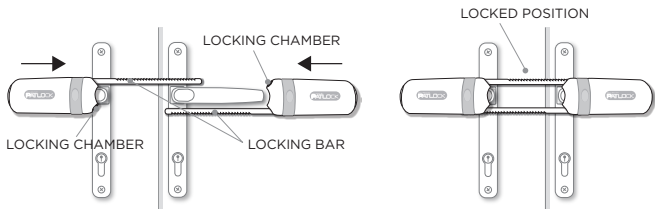

***Take care not to insert the locking bars into the hole for the handle on the opposite sleeve.***

## HOW TO REMOVE YOUR PATLOCK

Please follow the instructions HOW TO OPEN YOUR PATLOCK.

## PATLOCK INFORMATION & OPERATING SOLUTIONS

For further Technical information, FAQ's and helpful videos please visit our website at [www.patlock.co.uk/faqs](http://www.patlock.co.uk/faqs) or scan the QR code.



# HOW TO FIT YOUR NEW PATLOCK SPINDLES


## IMPORTANT

When fitting the Patlock tamper resistant spindles **DO NOT** push the spring clip onto the Patlock spindle until you have checked that they are the correct length for your doors and that the handles will fit correctly.

The Patlock spindle length will fit most doors, but if they are too long they will need cutting to the correct length before fitting. Check the spindle length for the interior and exterior handles separately due to the offset blocking knuckle on the Patlock spindles.

Remove the door handles from your French Doors and slide out the original spindle.

Insert the new Patlock spindle from the outside, so that the grooved section is pushed through the door and becomes visible from the inside.

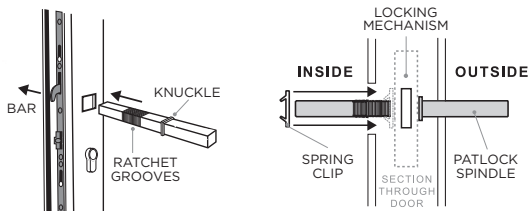

Once you have checked that the spindle lengths are correct, hold the Patlock spindle firmly from the outside and push the spring clip onto the Patlock spindle from the inside of the door ensuring that the clip engages with the grooved section to secure in position. Increase the hole size in the door casing if required to ensure the spring clip fits against the locking mechanism.

Refit the handles and your Patlock is ready to use.

For further information and guidance on how to fit your spindles please visit [patlock.co.uk](http://patlock.co.uk) or scan the QR code.

